

SMALL SIZE PACKAGING

Specially designed for repair and service centers



Description

New packaging with smaller quantities of lubricants better suited to service centers :

- No contamination risk during the transfer to the oiler
- Precise dosing
- Less lubricant waste

Content

- Single-dose capillaries (10 pces)
- Piston (1 pce, to be ordered separately)

Utilisation

Step 1




- ♦ Take out from the cardboard box one capillary and the piston
- ♦ Remove the green wax stoppers from the capillary and introduce the piston on the side where the rose plunger is

Step 2



- ♦ Push the piston in order to dose the required quantity

Step 3

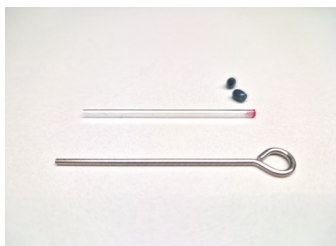

- ♦ Remove the piston and keep it for further use
- ♦ Place the used capillary and stoppers into the appropriate trash disposal

Storage

Moebius products should be stored in their original packaging, protected from light, in a clean and dry place and at an ideal temperature of 15-26°C.

An opened capillary should be used within a day (single use).

